


SASH: Elastomeric Pumps



STEP 1 - SET UP

Clean the area where your supplies will be placed with alcohol or a disinfectant wipe and gather your supplies. .

- (2) Saline Flush
- (1) Heparin Flush
- (3) Chlorhexidine Swab
- (1) Medicine (Elastomeric Pump)
- (1) Disinfectant Cap



STEP 2 - CLEAN HANDS

Wash your hands for one full minute. Dry with paper towel.

S

A

S


H

STEP 3 - SALINE FLUSH

1. Prepare saline syringe.
2. Clean needleless connector.
3. Attach saline syringe.
4. Unclamp and flush with 9 mL saline (Push-pause method)
5. Re-clamp

swab

Saline Flush

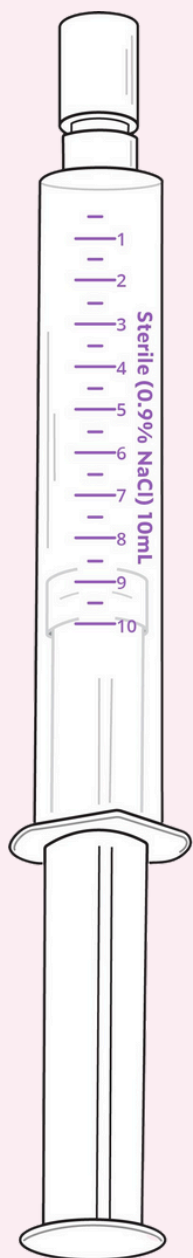


swab

SCRUB TIMES:

Chlorhexidine Pad: 30 second scrub and 1 minute dry

STEP 4 - ATTACH MEDICINE

1. Clean needleless connector.
2. Attach medicine.
3. Unclamp to start.
4. When finished re-clamp.

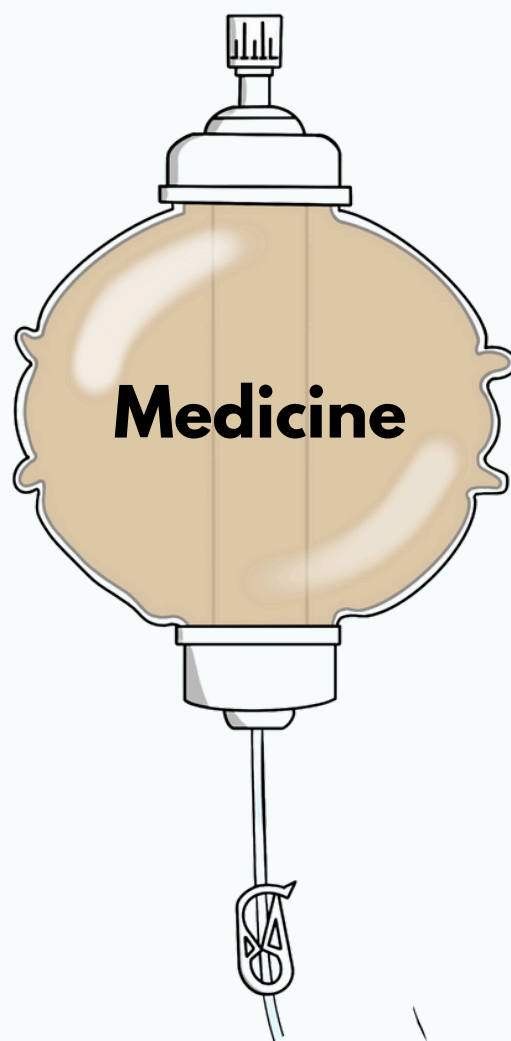


STEP 5 - SALINE FLUSH

1. Wash your hands.
2. Prepare saline and heparin syringes.
3. Detach empty bag or syringe.
4. Clean needleless connector.
5. Attach saline syringe.
6. Unclamp and flush with 9 mL saline. (Push-pause method)
7. Re-clamp.

swab

Saline Flush

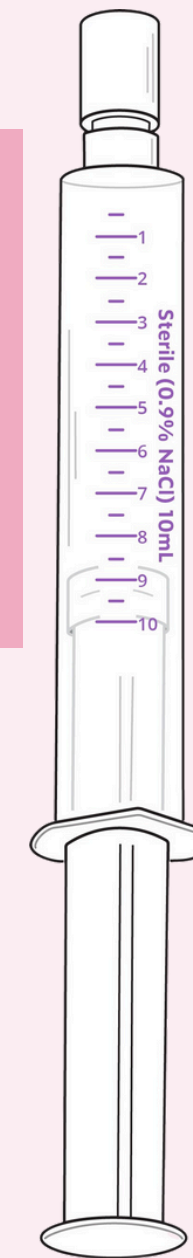

SCRUB TIMES:


Swab: 30 second scrub to blue cap and 1 minute dry

STEP 6- HEPARIN FLUSH

1. Clean needleless connector.
2. Attach heparin syringe.
3. Unclamp and flush with 1.5 mL heparin. (Push-pause method)
4. Re-clamp.
5. Apply disinfectant cap.

DISINFECTANT CAP

Heparin

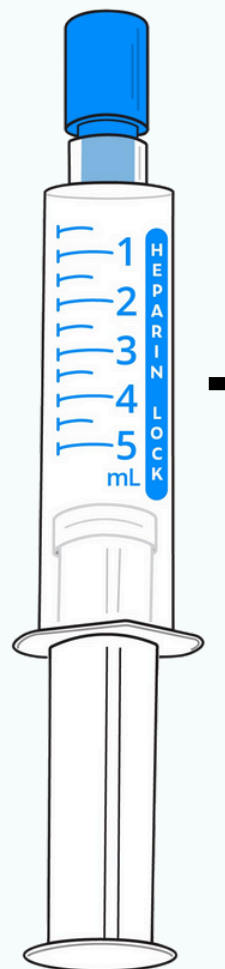

Note: When medicines are no longer being given through the line(s) saline will no longer be needed. Heparin flush only in each line every 24 hours.