


## Step 0: FLUSH T-PIECE

1. **Prepare** extra supplies: saline flush, alcohol-chlorhexidine swab, and disinfectant cap.
2. **Pause** CADD pump and **clamp** tubing.
  - a. press start/stop
  - b. press yes to pause
3. **Sanitize** hands.
4. **Scrub** needleless connector (blue cap) on T-piece using swab.
5. **Attach** saline syringe to T-piece needleless connector.
6. **Unclamp** T-piece and **flush** with saline (push-pause method).
7. **Re-clamp** T-piece and **apply** disinfectant cap.
8. Proceed with ASMR: CADD medicine bag change.

DISINFECTANT  
CAP

swab

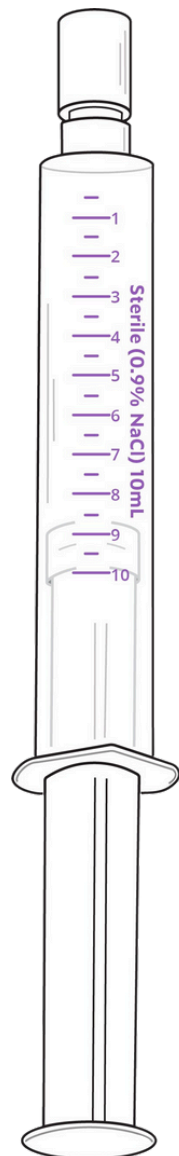

Saline Flush